

 YAMAHA

VENOVA™

## Venova™ YVS-100

Venovaを吹いてみよう！

Let's play Venova!

Lass uns Venova spielen!

Jouons au Venova!

¡Vamos a tocar con Venova!

Vamos tocar o Venova!

Сыграйте на Venova!

让我们演奏Venova!

Venova를 연주해봅시다!

日本語

English

Deutsch

Français

Español

Português

Русский

中文

한국어



## Let's play Venova™ !

This guidebook provides important tips on how to hold and play Yamaha Venova™, as well as details on controlling the pitch and timbre. Master the basics and enjoy playing!


\* Refer to the “Owner’s Manual” (separate booklet) for information regarding the care and handling of the instrument.

### Contents

---

<b>Before You Play .....</b>	<b>13</b>
Setting the Reed and Ligature .....	13
<b>Let's Try Playing .....</b>	<b>14</b>
Tips on Making Sound .....	15
Close the Tone Holes and Play Some Notes .....	16
Getting a Balanced Sound .....	17
<b>Controlling Tone .....</b>	<b>18</b>
Inside of Your Mouth .....	18
Tonguing .....	18
<b>Troubleshooting .....</b>	<b>19</b>
<b>Fingering Chart .....</b>	<b>92</b>
German System .....	92
Baroque System .....	94
<b>Sample Songs .....</b>	<b>96</b>
When The Saints Go Marching In .....	98
Amazing Grace .....	102

---


- The Venova™ is a branched pipe wind instrument manufactured and sold by the Yamaha Corporation. Venova™ and  are trademarks or registered trademarks of the Yamaha Corporation.
- The illustrations as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your instrument.

# Before You Play

## ■ Setting the Reed and Ligature


Slide the mouthpiece onto the body's neck, turning from side to side. After attaching the mouthpiece, set the reed and ligature onto the mouthpiece.

- \* The reed tip is delicate so please take care not to damage it with the ligature, etc.
- \* If you are using a reed made from cane rather than the resin reed supplied with the instrument, moisten the end of the reed in your mouth (or water) before playing.

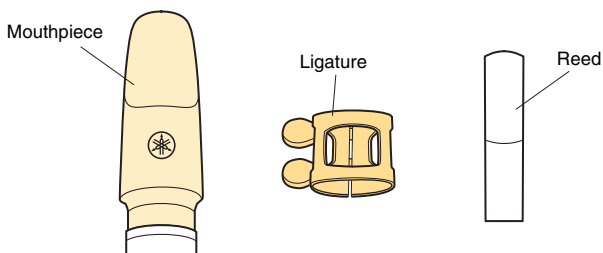

- 1 Slide the ligature onto the mouthpiece from its tapered end.
- 2 Position the reed so that the edge of the mouthpiece is slightly visible over the reed tip. Tighten the two screws on the ligature to secure the reed in place.

- \* Position the ligature so that the tuning fork logo is centered in the ligature's open space.
- \* Tighten the ligature screws just enough to keep the reed from moving. Take care not to over-tighten.

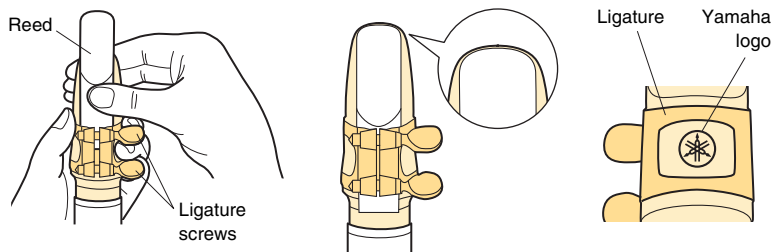


## Let's Try Playing

- 1 Hold the instrument as shown in the illustration below, keeping your back straight, shoulders loose, and chin pulled in.



First, hold the instrument without covering any of the holes.

- 2 Position the mouthpiece in your mouth with your upper front teeth resting about 1cm from the tip of the mouthpiece. Cover your lower teeth with your lower lip to keep your teeth from coming into direct contact with the reed.

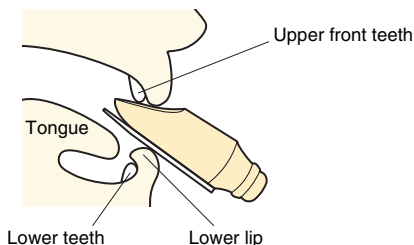

- 3 **Take a deep breath,** and blow into the instrument.

## Tips on Making Sound


### 1 Holding the Instrument

Holding the instrument the wrong way (wrong angle or poor posture) can result in poor tone or difficult fingering. Always be aware of proper playing form when playing the instrument.

\* Refer to the illustration on page 14 **1** for proper instrument angle when holding.

### 2 Mouth Shape (Embouchure\*)

With the reed resting on your lower lip, seal your mouth around the mouthpiece to keep air from leaking out of the corners of your mouth when blowing.

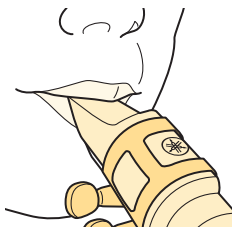

- Do not bite hard on the reed or mouthpiece.
- If you are experiencing difficulty getting sound from the instrument, refer to the chart on page 17 and check the mouthpiece position.

\* The shape of your mouth when playing the instrument is called the “embouchure.” The embouchure is very important when playing wind instruments. Proper positioning of lips, tongue, teeth, etc., creates an optimum embouchure, which lets you control the pitch and timbre of the instrument.

### 3 Blowing the Instrument

Compared to a recorder, the Venova requires more breath to play. Use a lot of air and blow firmly into the instrument.



## Let's Try Playing

### ■ Close the Tone Holes and Play Some Notes

- Use the ball of your finger (not the tip) to cover the hole.
- Use your fingers in a relaxed, stress-free form.


#### ● Finger Position

\* The illustration below shows all tone holes being covered.

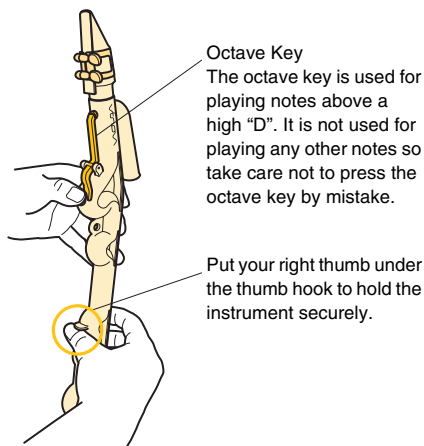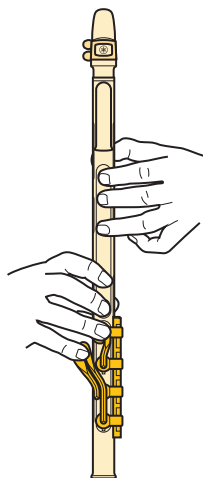

Since lower pitches are hard to produce without good embouchure and sufficient airflow, let's try playing a "G".

#### ● Fingering a "G"

 


Close the tone holes properly to achieve beautiful and stable tone, and good pitch.

Fingerings for other pitches are provided from page 92.

## Getting a Balanced Sound

If you are experiencing difficulty getting sound from your instrument, it might be a good time to review your embouchure.

Mouth shape and teeth alignment vary widely among individuals so take time finding an embouchure that works best for you. Refer to the chart below and try varying the position of your teeth, the angle that you hold the instrument, etc., to find a well-balanced tone.

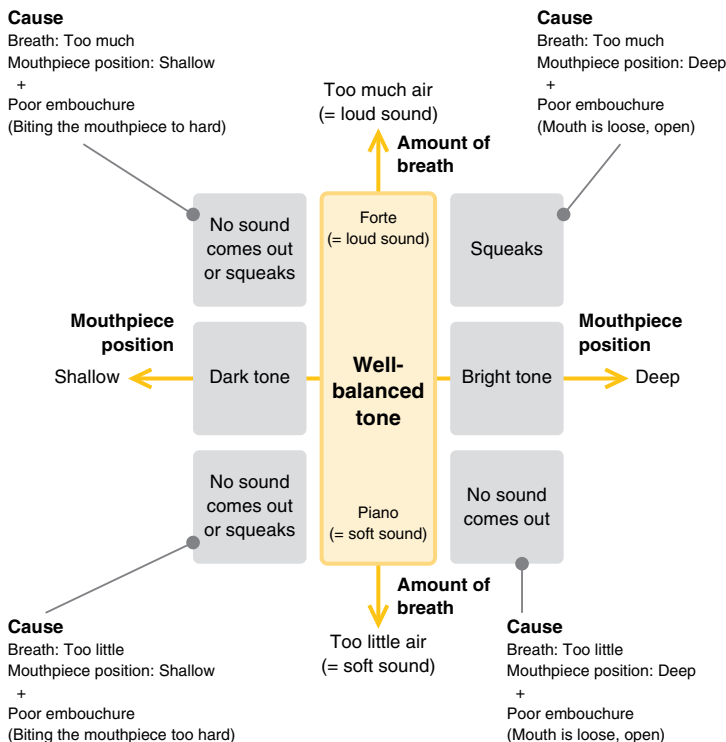

# Controlling Tone

## ■ Inside of Your Mouth

When blowing into the instrument, the inside of your mouth should be shaped as if you were pronouncing “OH.”

## ■ Tonguing

Tonguing is a technique for dividing a tone by interrupting the air flow with your tongue.

It is done by touching the end of the reed with the end of your tongue and releasing.

### Tips on creating tone

The Venova is compatible with soprano saxophone mouthpieces and reeds, so once you are able to produce individual notes smoothly using the supplied mouthpiece (**equivalent of Yamaha 4C soprano sax mouthpiece**) you might want to experiment with different reed/mouthpiece\* combinations to change the way the instrument blows and produce different tones (brighter, mellower, clearer).

**\* The instrument comes with a soft reed making it easier to play for beginners however, higher pitches may be more difficult to articulate.**

**Once you can blow sufficient amount of air into the instrument, you might want to move to a stiffer reed to play higher pitches more smoothly.**

**\* Stiffer reeds tend to play slightly sharp in pitch. If so, refer to the “About Tuning” section in the owner’s manual and adjust the mouthpiece position.**

**\* Some saxophone mouthpieces made by other manufacturers may fit poorly or produce poor pitch making them unsuitable for use with the Venova. Always consult with your Yamaha dealer before purchasing.**



# Troubleshooting

Condition	Cause	Solution
<b>No sound.</b>	The reed is not properly positioned on the mouthpiece.	Refer to page 13 <b>2</b> and properly position the reed.
	Not enough air to make the reed vibrate.	Increase the amount of air you blow into the instrument.
	Biting too hard on the mouthpiece (too much lower lip pressure on the reed).	Reduce the amount of pressure your lower lip is applying to the reed.
	Mouth is too loose (lower lip is not sufficiently supporting the reed).	Close your mouth tighter around the reed (not to the extent that the sound squeaks) to firmly support the reed with your lower lip.
<b>Low-pitch sounds are hard to make.</b>	The upper front teeth are not resting firmly on the mouthpiece.	Use your left thumb to firmly support the instrument so that the mouthpiece is in firm contact with the upper teeth.
<b>Low-pitch sounds shake and waver.</b>	Lower lip is covering too much of your lower teeth.	Reduce the amount of lip covering your teeth.
<b>Makes a squeaking sound.</b>	Mouthpiece is positioned too deep in the mouth.	Refer to the “Getting a Balanced Sound” section on page 17 and review your embouchure.
	Biting too hard on the mouthpiece.	Refer to the “Getting a Balanced Sound” section on page 17 and review your embouchure.
	Holding the instrument at the wrong angle.	Refer to the “Tips on Making Sound” section on page 15 and review the angle you hold the instrument.
	Not adequately covering the tone holes.	Refer to the “Close the Tone Holes and Play Some Notes” section on page 16 and firmly cover the tone holes.

## Troubleshooting

Condition	Cause	Solution
<b>Water noise can be heard while playing.</b>	Moisture has accumulated in the body, mouthpiece, or reed.	Remove moisture from inside of the body with the supplied cleaning swab and also remove moisture from inside of mouthpiece and reed with a soft cloth.
<b>Overall pitch is high.*</b>	Biting too hard on the mouthpiece.	Don't bite too hard on the mouthpiece.
	Mouthpiece is positioned too shallow in the mouth.	Position the mouthpiece deeper into your mouth.
	Upper front teeth are not firmly resting on the mouthpiece.	Make sure your upper front teeth are placed firmly on the mouthpiece.
<b>Overall pitch is low.*</b>	Mouth is too loose or open (the lower lip is not sufficiently supporting the reed).	Close your mouth tighter around the reed (not to the extent that the sound squeaks) to firmly support the reed with your lower lip.

\* The reason the pitch is off is possibly due to a poor embouchure. Refer to the "Getting a Balanced Sound" section on page 17 to find a solution that improves your pitch.

The end section of this guide provides fingering charts (from page 92) and some sample songs (from page 96). You can find more information for the Venova, such as playing tips and performance videos, on the web site listed below.

**Yamaha's special Venova Site:**

**<https://www.yamaha.com/venova/>**

# 運指表 / Fingering Chart / Griffabelle / Tableau des doigts / Gráfico de

## ■ ジャーマン式運指

トーンホールアダプター (A) を装着 (工場出荷時) するとジャーマン式運指となります。

\* F#, G#, Bb などの半音は音程が高く出やすく、音色も響きにくくなります。替え指や息の量、アンブシュアをコントロールして、より良い音程で演奏しましょう。

## ■ German System

Place the tone hole adaptor (A) (installed at the factory) to set to German System fingering.

\* Semitones such as F#, G#, Bb tend to easily play sharp, and are hard to resonate. Use fingering, airflow, and embouchure control to adjust intonation.

## ■ Deutsche Griffweise

Setzen Sie den Tonloch-Adapter (A) (ab Werk installiert) ein, um mit deutscher Griffweise zu spielen.

\* Halbtöne wie F#, G#, Bb klingen häufig grell und sind schwer zu intonieren. Passen Sie die Intonation durch Kontrolle von Fingersatz, Luftstrom und Ansatz an.


## ■ Système allemand

Placez l'adaptateur (A) de cheminée (installé en usine) pour choisir le doigté du système allemand.

\* Les demi-tons tels que le fa dièse, le sol dièse et le si bémol ont tendance à devenir facilement stridents et résonnent difficilement. Pour ajuster l'intonation, contrôlez le doigté, le jet d'air et l'embouchoir.

## ■ Sistema alemán

Coloque el adaptador de oído (A) (instalado de fábrica) para ajustar el instrumento según la posición de los dedos del Sistema alemán.

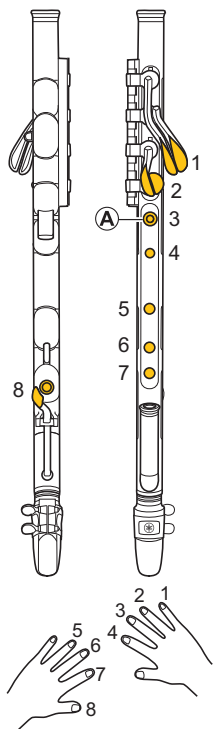

1								
2								
3								
4								
5								
6								
7								
8								
1								
2								
3								
4								
5								
6								
7								
8								

# digitado / Tabela de digitação / Таблица аппликатуры / 指法图 / 운지법

\* Los semitonos como F#, G# y Bb suelen tocarse sostenidos y difícilmente tienen resonancia. Ponga los dedos en su posición, sople aire y utilice el control de la embocadura para ajustar la entonación.

## ■ Sistema germânico

Coloque o adaptador de orifício de tom (A) (instalado de fábrica) para definir o dedilhado do sistema germânico.

\* Semitons como F#, G# e Bb tendem a ser reproduzidos mais agudos e são difíceis de produzir. Use o dedilhado, o fluxo de ar e o controle de embocadura para ajustar a entonação.

## ■ Немецкая система

Разместите адаптер тонального отверстия (A) (установленный изготовителем) так, чтобы выбрать немецкую систему аппликатуры.

\* Полутона, такие как F#, G#, Bb, как правило, звучат резко и резонируют плохо. Скорректировать звучание можно с помощью аппликатуры, амбюшюра и контроля потока воздуха.

## ■ 德式指法

安装音孔适配器(A) (出厂时已安装) 按德式指法演奏。

\* F#, G#, Bb 等半音很容易演奏得更尖锐, 且不易形成共鸣。


\* 请利用指法、气流和口型进行控制来调整声调。

## ■ 독일식



톤 홀 어댑터 (A) (설치하여 출고) 를 놓고 독일식 운지로 설정합니다.

\* F#, G#, Bb 등의 반음은 날카롭게 연주하기 쉬우며 공명시키기 어렵습니다.

\* 운지와 공기 흐름, 암부쉬어 제어를 사용하여 음조를 조절하십시오.

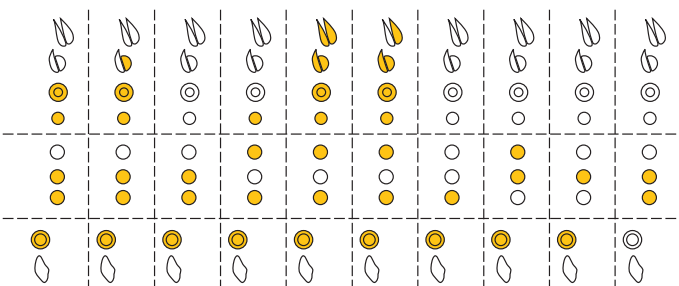

 - 押さえる
- Close
- Geschlossen
- Fermée
- Cerrado
- Fechado
- Закрыто
- 闭孔
- 닫기

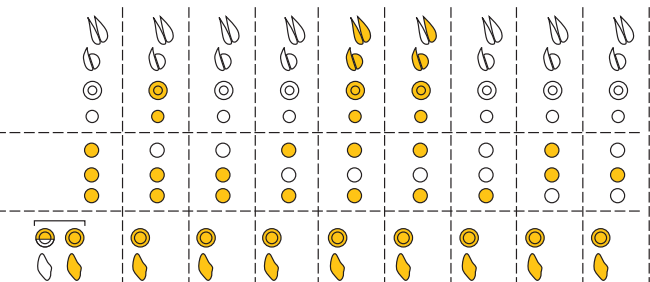

- 3/4 ふうさぐ
- Cover 3/4
- 3/4 abgedeckt
- Couverture aux 3/4
- Cubierto 3/4
- Tapar 3/4
- Закрыто на три четверти
- 覆盖 3/4
- 3/4 닫기

## ■ バロック式運指

トーンホールアダプター (A) を外すとバロック式運指となります。

\* F#, G#, B♭ などの半音は音程が高く出やすく、音色も響きに小さくなります。替え指や息の量、アンブシュアをコントロールして、より良い音程で演奏しましょう。

## ■ Baroque System

Remove the tone hole adaptor (A) to change to Baroque System fingering.

\* Semitones such as F#, G#, B♭ tend to easily play sharp, and are hard to resonate. Use fingering, airflow, and embouchure control to adjust intonation.

## ■ Barocke Griffweise

Entfernen Sie den Tonloch-Adapter (A), um zur barocken Griffweise zu wechseln.

\* Halböne wie F#, G#, B♭ klingen häufig grell und sind schwer zu intonieren. Passen Sie die Intonation durch Kontrolle von Fingersatz, Luftstrom und Ansatz an.


## ■ Système baroque

Retirez l'adaptateur (A) de cheminée pour choisir le doigté du système baroque.

\* Les demi-tons tels que le fa dièse, le sol dièse et le si bémol ont tendance à devenir facilement stridents et résonnent difficilement. Pour ajuster l'intonation, contrôlez le doigté, le jet d'air et l'embouchoir.

## ■ Sistema barroco

Quite el adaptador de orificio de tono (A) para cambiar al sistema de digitación barroca.

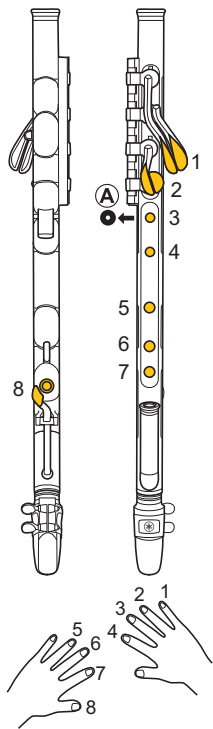

	G	G#	A	Bb	B	C	D	E	F	G	A	B	C
1	●	●	●	●	●	●	●	●	●	●	●	●	●
2	●	●	●	●	●	●	●	●	●	●	●	●	●
3	●	●	●	●	●	●	●	●	●	●	●	●	●
4	●	●	●	●	●	●	●	●	●	●	●	●	●
5	●	●	●	●	●	●	●	●	●	●	●	●	●
6	●	●	●	●	●	●	●	●	●	●	●	●	●
7	●	●	●	●	●	●	●	●	●	●	●	●	●
8	○	○	○	○	○	○	○	○	○	○	○	○	○

	G	G#	A	Bb	B	C	D	E	F	G	A	B	C
1	●	●	●	●	●	●	●	●	●	●	●	●	●
2	○	●	●	●	●	●	●	●	●	●	●	●	●
3	○	○	●	●	●	●	●	●	●	●	●	●	●
4	○	○	○	●	●	●	●	●	●	●	●	●	●
5	○	○	○	○	●	●	●	●	●	●	●	●	●
6	○	○	○	○	○	●	●	●	●	●	●	●	●
7	○	○	○	○	○	○	●	●	●	●	●	●	●
8	○	○	○	○	○	○	○	○	○	○	○	○	○

\* Los semitonos como F#, G# y Bb suelen tocarse sostenidos y difícilmente tienen resonancia. Ponga los dedos en su posición, sople aire y utilice el control de la embocadura para ajustar la entonación.

### ■ Sistema barroco

Remova o adaptador do orifício de tom (A) para mudar para o dedilhado do sistema barroco.

\* Semitons como F#, G# e Bb tendem a ser reproduzidos mais agudos e são difíceis de produzir. Use o dedilhado, o fluxo de ar e o controle de embocadura para ajustar a entonação.

### ■ Барочная система

Снимите адаптер для тонального отверстия (A), чтобы выбрать барочную систему аппликатуры.

\* Полутона, такие как F#, G#, Bb, как правило, звучат резко и резонируют плохо. Скорректировать звучание можно с помощью аппликатуры, амбюшюра и контроля потока воздуха.

### ■ 巴洛克指法

去掉音孔适配器 (A) 可以按巴洛克指法演奏。

\* F#, G#, Bb 等半音很容易演奏得更尖锐, 且不易形成共鸣。


 
\* 请利用指法、气流和口型进行控制来调整声调。

### ■ 바로크식


톤 홀 어댑터 (A)를 제거하면 바로크식 운지법으로 연주할 수 있습니다.

\* F#, G#, Bb 등의 반음은 날카롭게 연주하기 쉬우며 공명시키기 어렵습니다.

\* 운지와 공기 흐름, 암부슈어 제어를 사용하여 음조를 조절하십시오.

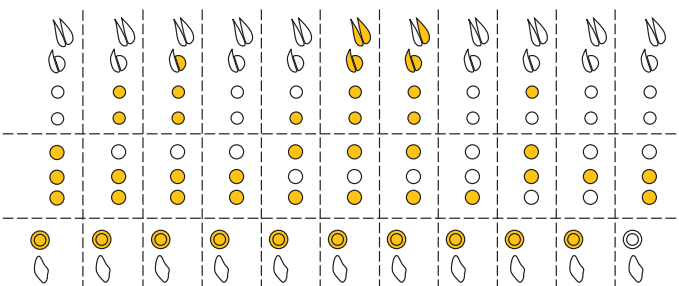

- 押さえる
- Close
- Geschlossen
- Fermée
- Cerrado
- Fechado
- Закрыто
- 闭孔
- 닫기

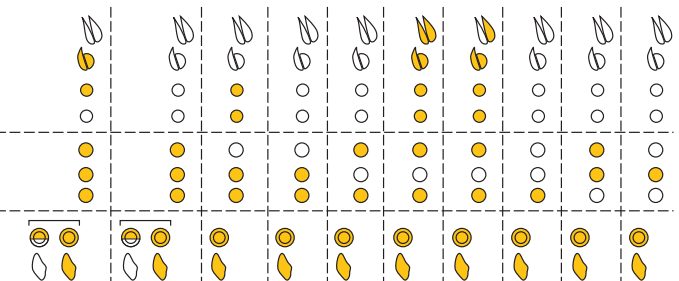


- 3/4 ふうさぐ
- Cover 3/4
- 3/4 abgedeckt
- Couverture aux 3/4
- Cubierto 3/4
- Tapar 3/4
- Закрыто на три четверти
- 覆盖 3/4
- 3/4 덮기

Venova はソプラノリコーダーやフルートなど C 調の楽器用の楽譜をそのまま演奏することができます。


お気に入りの曲の楽譜を探して Venova で吹いてみましょう。

\* 音域によって演奏できない場合もありますのでご注意ください。

\* バロック運指の場合は、運指図右のカッコ内の運指 (  ) で演奏してください。


With the Venova, you can play sheet music of instruments in C major like the soprano recorder, flute, etc. Find your favorite songs and play them with the Venova.

\* Please note that the song might not fit within the instrument's range.

\* When playing the instrument with the Baroque System fingering, make sure you use the fingerings (  ) shown in the parentheses.


Mit der Venova können Sie Musiknoten für C-Instrumente spielen, wie beispielsweise Sopranblockflöte, Flöte usw. Suchen Sie Ihre Lieblingsongs heraus und spielen Sie sie auf der Venova.

\* Beachten Sie, dass manche Lieder außerhalb des Tonbereichs des Instruments liegen.

\* Wenn Sie das Instrument in barocker Griffweise spielen, verwenden Sie die in Klammern (  ) gezeigten Fingersätze.


Grâce au Venova, vous pouvez utiliser des partitions en do majeur pour flûte soprano, flûte, etc. Retrouvez vos morceaux favoris et jouez-les sur le Venova.

\* Veuillez noter que le morceau peut ne pas correspondre à la gamme de l'instrument.

\* Lorsque vous utilisez le doigté du système baroque, utilisez les doigtés indiqués entre parenthèses (  ).


Con el instrumento Venova, puede tocar partituras de instrumentos en Do mayor como la flauta soprano, la flauta, etc. Busque sus canciones favoritas y tóquelas con el instrumento Venova.

\* Tenga en cuenta que la canción puede no ajustarse al registro del instrumento.

\* Si se toca el instrumento con el digitado del Sistema barroco, asegúrese de que utiliza la posición de los dedos que se muestra entre paréntesis (  ).

Com o Venova, você pode tocar partituras de instrumentos em dó maior, flauta doce soprano, flauta, etc. Encontre suas músicas preferidas e toque-as com o Venova.


\* Observe que a música pode não entrar no intervalo de notas do instrumento.

\* Ao tocar o instrumento com o dedilhado do sistema barroco, use os dedilhados mostrados entre parênteses (  ).




С помощью инструмента Venova можно исполнять музыку для инструментов в тональности до мажор, включая флейты, блокфлейты сопрано и т. д. Найдите любимые композиции и сыграйте их на Venova.

\* Обратите внимание: композиция может не соответствовать диапазону инструмента.

\* При игре на инструменте с аппликатурой по барочной системе убедитесь, что используете аппликатуры, показанные в скобках (  ).


您可以使用 Venova 演奏 C 大调的乐器乐谱（例如高音竖笛和长笛等）。用 Venova 演奏您最喜爱的曲目。

\* 请注意，该曲目可能不在该乐器的音域范围内。

\* 采用巴洛克指法演奏该乐器时，请确保使用括号 (  ) 内呈现的指法。

Venova를 사용하면 소프라노 리코더나 플루트 등과 같이 C 장조 악보를 연주할 수 있습니다. 좋아하는 곡을 찾아서 Venova로 연주해보십시오.

\* 곡이 악기 연주 범위를 넘어갈 수 있습니다.

\* 바로크식 운지법으로 악기를 연주할 때는 괄호 안에 표시된 운지 (  )를 사용하십시오.

■ 聖者の行進

難易度：低

左手だけの運指で演奏できますが右手の親指もしっかり支えて楽器がぐらぐらしないように気をつけましょう。

■ When The Saints Go Marching In

Difficulty: Low

This song only requires fingering with the left hand so make sure you provide good support with your right thumb to keep the instrument from moving about.

■ When The Saints Go Marching In

Schwierigkeit: Gering

Für diesen Song benötigen Sie nur die Finger der linken Hand. Dabei sollten Sie das Instrument mit dem rechten Daumen gut stützen, um zu verhindern, dass es sich unkontrolliert bewegt.

■ When The Saints Go Marching In

Difficulté : faible

Ce morceau ne nécessite qu'un doigté à la main gauche : vous pouvez par conséquent tenir l'instrument de la main droite afin d'éviter qu'il ne bouge.

■ When The Saints Go Marching In

Dificultad: Baja

Para tocar esta canción solo es necesario el digitado con la mano izquierda, de manera que deberá asegurar un soporte adecuado con el pulgar derecho para evitar que el instrumento se mueva constantemente.

■ When The Saints Go Marching In

Dificuldade: Baixa

Esta canção exige dedilhado apenas com a mão esquerda, portanto, dê uma sustentação firme com o polegar direito para impedir que o instrumento se mova.

■ When The Saints Go Marching In

Сложность: низкая

При исполнении этой композиции применяется аппликатура лишь для левой руки, поэтому как следует поддерживайте инструмент большим пальцем правой руки и не давайте ему шататься.

■ 圣者的行进 - When The Saints Go Marching In

难度：低

此曲目仅使用左手指法，请确保您的右手拇指可以支撑乐器让其保持不动。

■ 성자의 행진 (When The Saints Go Marching In)

난도: 낮음

이 곡은 왼손으로만 운지하므로 악기가 움직이지 않도록 오른손 엄지로 잘 받쳐주십시오.

# When The Saints Go Marching In

聖者の行進

American folk song

アメリカ民謡

The image displays a musical score for the song "When The Saints Go Marching In" in G major (one sharp) and 2/4 time. The score is presented in four systems, each with a treble clef staff and a vertical column of fingerings. The fingerings are represented by circles: yellow circles indicate fingers 1-4, and white circles indicate fingers 5 and thumb. The first system covers measures 1-4, the second system (starting with a '5' above the staff) covers measures 5-8, the third system (starting with a '9' above the staff) covers measures 9-12, and the fourth system (starting with a '13' above the staff) covers measures 13-16. The melody consists of quarter and eighth notes, with some measures containing rests.

## ■ 聖者の行進

### 難易度：高

低いドは難易度の高い音ですが「指のフォーム」「アンブシュア」「息の入れ方」のバランスを整えしっかりと鳴らしましょう。

## ■ When The Saints Go Marching In

### Difficulty: High

The low “C” is difficult to sound. Make sure your fingering, embouchure, and airflow balanced well.

## ■ When The Saints Go Marching In

### Schwierigkeit: Hoch

Das tiefe „C“ ist schwierig zu intonieren. Achten Sie darauf, dass Fingersatz, Ansatz und Luftstrom gut ausgewogen sind.

## ■ When The Saints Go Marching In

### Difficulté : élevée

Le do grave est difficile à obtenir. Veillez à bien équilibrer le doigté, l'embouchoir et le jet d'air.

## ■ When The Saints Go Marching In

### Dificultad: Alta

El Do alto es difícil de tocar. Compruebe que el digitado, la embocadura y el aire están bien equilibrados.

## ■ When The Saints Go Marching In

### Dificuldade: Alta

O “C” (dó) grave é difícil de produzir. Equilibre bem o dedilhado, a embocadura e o fluxo de ar.

## ■ When The Saints Go Marching In

### Сложность: высокая

Нижнее до сложно извлечь. Хорошо сбалансируйте аппликатуру, амбушюр и воздушный поток.

## ■ 聖者の行進 - When The Saints Go Marching In

### 难度：高

低音“C”难以发声。请确保您指法、口型和气流的统一。

## ■ 성자의 행진 (When The Saints Go Marching In)

### 난도: 높음

낮은 “C” 는 소리를 내기가 어렵습니다. 운지와 암부슈어, 공기 흐름이 균형을 잘 이룰 수 있게 하십시오.

## When The Saints Go Marching In

聖者の行進

American folk song

アメリカ民謡

The image displays a musical score for the song "When The Saints Go Marching In" in G major, 2/4 time. The score is presented in four systems, each with a treble clef and a key signature of one sharp (F#). Above each staff, there are vertical columns of fingerings for the right hand, indicated by numbers 1-5 and circles. The first system covers measures 1-4, the second system measures 5-8, the third system measures 9-12, and the fourth system measures 13-16. The music consists of a simple, rhythmic melody with a steady eighth-note accompaniment. The fingerings are carefully placed to facilitate the performance of the piece.

## ■ アメージング・グレース

難易度：低

オクターブキー（またはサミング）を使った「ミ」がしっかり鳴るように運指を気をつけましょう。

## ■ Amazing Grace

Difficulty: Low

The “E” requires use of the octave key (or thumbing) so pay close attention to your fingering to get a good, solid tone.

## ■ Amazing Grace

Schwierigkeit: Gering

Für das „E“ benötigen Sie die Oktavklappe (per Daumendruck), achten Sie also gut auf Ihren Fingersatz, um einen reinen, stabilen Ton zu erzeugen.

## ■ Amazing Grace

Difficulté : faible

Le mi nécessite l'utilisation de la clé d'octave : le doigté est donc essentiel pour que le son obtenu soit plein et de bonne qualité.

## ■ Amazing Grace

Dificultad: Baja

Para la nota Mi es necesario utilizar la llave de octava (o el golpe de pulgar), de manera que preste especial atención al digitado para conseguir un tono bueno y sólido.

## ■ Amazing Grace

Dificuldade: Baixa

O “E” (mi) requer o uso da chave de oitava (“thumbing”), então preste atenção ao seu dedilhado para obter um tom sólido.

## ■ Amazing Grace

Сложность: низкая

Для исполнения ми нужно использовать октавный клапан (или действовать большим пальцем), поэтому уделите большое внимание аппликатуре, чтобы получить хороший, чистый тон.

## ■ 奇異恩典 - Amazing Grace

难度：低

“E”需要使用八度音键（或大拇指），请特别注意您的指法从而获得一流音色。

## ■ 어메이징 그레이스 (Amazing Grace)

난도: 낮음

“E”는 옥타브 키(또는 엄지)를 사용해야 하므로 안정적인 소리가 나도록 운지에 주의를 기울이십시오.

# Amazing Grace

アメージング・グレース

Traditional  
伝承曲

The image displays a musical score for the piece "Amazing Grace" in 3/4 time. The score is presented in four systems, each with a treble clef staff and a corresponding guitar chord diagram above it. The chord diagrams use circles to represent fret positions on the strings, with yellow circles indicating the notes to be played. The first system (measures 1-3) starts with a G major chord (x02320) and includes a triplet of eighth notes (G4, A4, B4) in the second measure. The second system (measures 4-6) begins with a D major chord (xx0232) and features a triplet of eighth notes (D4, E4, F4) in the fifth measure. The third system (measures 7-9) starts with a G major chord (x02320) and includes a triplet of eighth notes (G4, A4, B4) in the eighth measure. The fourth system (measures 10-12) begins with a D major chord (xx0232) and features a triplet of eighth notes (D4, E4, F4) in the eleventh measure. The piece concludes with a final D major chord (xx0232) in the twelfth measure.

## ■ アメージング・グレース

### 難易度：高

低い音をしっかりと鳴らすにはすべての音孔がきちんと塞がれている事が重要です。指の腹の部分で確実に音孔をふさぎましょう。

## ■ Amazing Grace

### Difficulty: High

It is important that all the tone holes are properly covered in order to get a good resonant tone on the low notes. Make sure the tone holes are completely covered with the ball of your finger (not the tip).

## ■ Amazing Grace

### Schwierigkeit: Hoch

Es ist wichtig, dass alle Tonlöcher richtig abgedeckt sind, um im tiefen Tonbereich einen guten, klangvollen Ton zu erzeugen. Achten Sie darauf, dass Sie die Tonlöcher vollständig mit den Fingerkuppen abdecken (nicht mit den Fingerspitzen).

## ■ Amazing Grace

### Difficulté : élevée

Il est important que toutes les cheminées soient correctement couvertes pour que le son des notes basses résonne correctement. Veillez à couvrir complètement les cheminées avec la pulpe du doigt (et non avec l'extrémité).

## ■ Amazing Grace

### Dificultad: Alta

Es importante que todos los agujeros tonales se cubran correctamente para conseguir un buen tono resonante en las notas bajas. Asegúrese de que los agujeros tonales queden cubiertos completamente con la yema de los dedos (no con la punta).

## ■ Amazing Grace

### Dificuldade: Alta

É importante que todos os orifícios de tom sejam tapados adequadamente a fim de obter um tom ressonante nas notas graves. Certifique-se de que os orifícios de tom estejam completamente tapados com a polpa do seu dedo (não a ponta).

## ■ Amazing Grace

### Сложность: высокая

Для хорошего резонирующего тона в низких нотах важно правильно закрывать все тональные отверстия. Убедитесь, что тональные отверстия полностью закрыты подушечкой (не кончиком) пальца.

## ■ 奇異恩典 - Amazing Grace

### 难度：高

重要事項：为了在低音上获得良好的共鸣效果，请以正确的方式按下所有音孔。请确保使用指腹（而不是指尖）完全按住音孔。

## ■ 어메이징 그레이스 (Amazing Grace)

### 난도: 높음

낮은 음에서 좋은 공명음을 내기 위해서는 모든 톤 홀을 적절히 덮어야 합니다. 손가락 (끝이 아니라) 지문 부분으로 톤 홀을 완전히 막으십시오.



# Amazing Grace

アメージング・グレース

Traditional  
伝承曲

The image displays a musical score for the piece "Amazing Grace" in 3/4 time, featuring a treble clef and a key signature of one flat (B-flat). The score is presented in four systems, each with a musical staff and a corresponding guitar tablature above it. The tablature uses numbers 1-5 to indicate fret positions and letters 'a' through 'e' to denote string positions. The first system begins at measure 1 and includes a triplet of eighth notes in the second measure. The second system starts at measure 4 and concludes with a long note in the final measure. The third system begins at measure 8 and also features a triplet. The fourth system starts at measure 12 and ends with a double bar line. The piece is identified as a traditional piece.



ZX60170

JA EN DE FR ES PT RU ZH KO

## YAMAHA CORPORATION

10-1 Nakazawa-cho, Naka-ku,  
Hamamatsu, 430-8650 Japan

## ヤマハ株式会社

〒430-8650 静岡県浜松市中区中沢町10-1

Manual Development Group

© 2017 Yamaha Corporation

Published 10/2018 发行 POZC-D0

Printed in Indonesia

ZX60170