


 **YAMAHA**
sonogenic
SHS-300

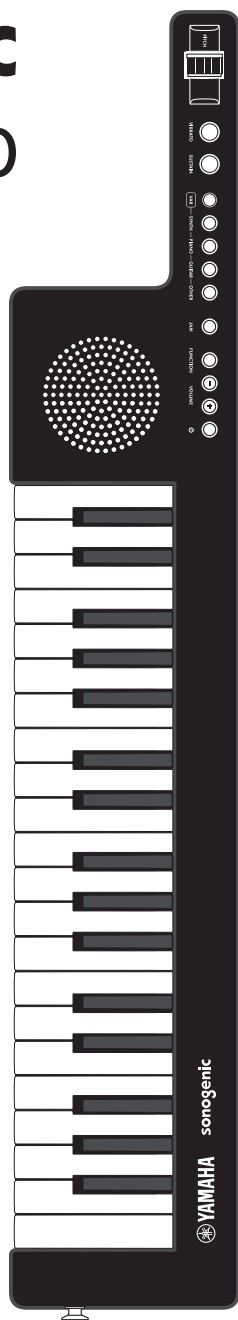

MIDIリファレンス
MIDI Reference

JA EN

Function...	Transmitted	Recognized	Remarks
Basic Channel Default Changed	1 - 16 ×	1 - 16 ×	
Mode Default Messages Altered	3 × *****	3 × ×	
Note Number : True voice	18 - 114 *****	0 - 127 0 - 127	
Velocity Note On Note Off	○ 9nH, v=1-127 ×	○ 9nH, v=1-127 ×	
After Touch Key's Ch's	× ×	× ×	
Pitch Bend	○	○	
Control Change	0,32 × 1 ○ 5,65 × 6 ○ 38 × 7,10 × 11 × 64 ○ 71,74 × 72,73 × 84 × 91,93 × 96,97 × 100,101 ○	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	Bank Select Modulation Portamento Data Entry (MSB) Data Entry (LSB) Main Volume, Pan Expression Sustain Sound Control Sound Control Portamento Control Effect Depth RPN Inc,Dec RPN LSB,MSB
Prog Change : True #	× *****	○ 0 - 127	
System Exclusive	○	○	
Common : Song Pos. : Song Sel. : Tune	× × ×	× × ×	
System : Clock Real Time: Commands	× ×	× ×	
Aux : All Sound Off : Reset All Cntrls : Local On/Off Mes- sages: All Notes Off : All Notes Off : All Sound Off : Active Sense : Reset	○ ○ × × × × ○ ×	○ (120) ○ (121) ○ (122) ○ (123) ○ (124,125) ○ (126,127) ○ ×	

Notes:

Mode 1 : OMNI ON , POLY
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON ,MONO
Mode 4 : OMNI OFF,MONO

○ : Yes
× : No